



30.KIT.01

166 un

						
10.001.10 Lubrificador 06 x 100 10un	10.001.14 Lubrificador 08 x 100 10un	10.001.18 Lubrificador 10 x 100 10un	10.001.20 Lubrificador 10 x 150 10un	10.001.34 Lubrificador 5/16"SAE 10un	10.001.38 Lubrificador 1/8"SAE 10un	10.001.40 Lubrificador 1/4"SAE 8un
						
10.002.10 Lubrificador 45° 06 x 100 8un	10.002.14 Lubrificador 45° 08 x 100 8un	10.002.18 Lubrificador 45° 10 x 100 8un	10.002.20 Lubrificador 45° 10 x 150 6un	10.002.34 Lubrificador 45° 5/16"SAE 4un	10.002.38 Lubrificador 45° 1/8"SAE 4un	10.002.40 Lubrificador 45° 1/4"SAE 6un
						
10.003.10 Lubrificador 90° 06 x 100 8un	10.003.14 Lubrificador 90° 08 x 100 8un	10.003.18 Lubrificador 90° 10 x 100 8un	10.003.20 Lubrificador 90° 10 x 150 6un	10.003.34 Lubrificador 90° 5/16"SAE 4un	10.003.38 Lubrificador 90° 1/8"SAE 4un	10.003.40 Lubrificador 90° 1/4"SAE 6un