



30.KIT.01
Kit de Lubrificadores
(166 un)

 <p>10.001.10 Lubrificador 06 x 100 10un</p>	 <p>10.001.14 Lubrificador 08 x 100 15un</p>	 <p>10.001.18 Lubrificador 10 x 100 15un</p>	 <p>10.001.20 Lubrificador 10 x 150 10un</p>	 <p>10.001.34 Lubrificador 5/16" SAE 10un</p>	 <p>10.001.38 Lubrificador 1/8" GAS 10un</p>	 <p>10.001.40 Lubrificador 1/4" GAS 8un</p>
 <p>10.002.10 Lubrificador 45° 06 x 100 8un</p>	 <p>10.002.14 Lubrificador 45° 08 x 100 8un</p>	 <p>10.002.18 Lubrificador 45° 10 x 100 8un</p>	 <p>10.002.20 Lubrificador 45° 10 x 150 6un</p>	 <p>10.002.34 Lubrificador 45° 5/16" SAE 4un</p>	 <p>10.002.38 Lubrificador 45° 1/8" GAS 4un</p>	 <p>10.002.40 Lubrificador 45° 1/4" GAS 6un</p>
 <p>10.003.10 Lubrificador 90° 06 x 100 8un</p>	 <p>10.003.14 Lubrificador 90° 08 x 100 8un</p>	 <p>10.003.18 Lubrificador 90° 10 x 100 8un</p>	 <p>10.003.20 Lubrificador 90° 10 x 150 6un</p>	 <p>10.003.34 Lubrificador 90° 5/16" SAE 4un</p>	 <p>10.003.38 Lubrificador 90° 1/8" GAS 4un</p>	 <p>10.003.40 Lubrificador 90° 1/4" GAS 6un</p>