
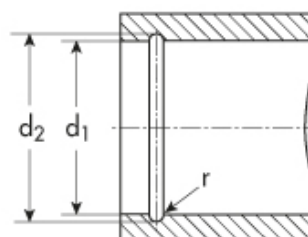


FREIOS DE SEGURANÇA

CATÁLOGO DE FREIOS DE SEGURANÇA

HM032-01 | 6ª Edição | Abril 2021

Freio de Arame Interior em Aço (DIN7993) | Tabelas

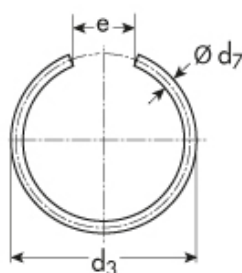

Código	Descrição (d1 x d7)	d1	d3	d2	e
FR.7993I.007	FREIO DE ARAME INTERIOR (7993) AÇO 007 x 0.80	7	7,9	7,8	4,0
FR.7993I.008	FREIO DE ARAME INTERIOR (7993) AÇO 008 x 0.80	8	8,9	8,8	4,0
FR.7993I.010	FREIO DE ARAME INTERIOR (7993) AÇO 010 x 0.80	10	10,9	10,8	4,0
FR.7993I.012	FREIO DE ARAME INTERIOR (7993) AÇO 012 x 1.00	12	13,2	13,0	6,0
FR.7993I.014	FREIO DE ARAME INTERIOR (7993) AÇO 014 x 1.00	14	15,2	15,0	6,0
FR.7993I.016	FREIO DE ARAME INTERIOR (7993) AÇO 016 x 1.60	16	17,8	17,6	8,0
FR.7993I.018	FREIO DE ARAME INTERIOR (7993) AÇO 018 x 1.60	18	19,8	19,6	8,0
FR.7993I.020	FREIO DE ARAME INTERIOR (7993) AÇO 020 x 2.00	20	22,3	22,0	10,0
FR.7993I.022	FREIO DE ARAME INTERIOR (7993) AÇO 022 x 2.00	22	24,3	24,0	10,0
	FREIO DE ARAME INTERIOR (7993) AÇO 024 x 2.00	24	26,3	26,0	10,0
FR.7993I.025	FREIO DE ARAME INTERIOR (7993) AÇO 025 x 2.00	25	27,3	27,0	10,0
FR.7993I.026	FREIO DE ARAME INTERIOR (7993) AÇO 026 x 2.00	26	28,3	28,0	10,0
FR.7993I.028	FREIO DE ARAME INTERIOR (7993) AÇO 028 x 2.00	28	30,3	30,0	10,0
FR.7993I.030	FREIO DE ARAME INTERIOR (7993) AÇO 030 x 2.00	30	32,3	32,0	10,0
FR.7993I.032	FREIO DE ARAME INTERIOR (7993) AÇO 032 x 2.50	32	34,9	34,5	12,0
FR.7993I.035	FREIO DE ARAME INTERIOR (7993) AÇO 035 x 2.50	35	37,9	37,5	12,0
	FREIO DE ARAME INTERIOR (7993) AÇO 038 x 2.50	38	40,9	40,5	12,0
FR.7993I.040	FREIO DE ARAME INTERIOR (7993) AÇO 040 x 2.50	40	42,9	42,5	12,0
FR.7993I.042	FREIO DE ARAME INTERIOR (7993) AÇO 042 x 2.50	42	45,0	44,5	16,0
	FREIO DE ARAME INTERIOR (7993) AÇO 045 x 2.50	45	48,0	47,5	16,0
	FREIO DE ARAME INTERIOR (7993) AÇO 048 x 2.50	48	51,0	50,5	16,0
FR.7993I.050	FREIO DE ARAME INTERIOR (7993) AÇO 050 x 2.50	50	53,0	52,5	16,0
FR.7993I.055	FREIO DE ARAME INTERIOR (7993) AÇO 055 x 3.20	55	58,9	58,2	20,0
FR.7993I.060	FREIO DE ARAME INTERIOR (7993) AÇO 060 x 3.20	60	63,9	63,2	20,0
FR.7993I.065	FREIO DE ARAME INTERIOR (7993) AÇO 065 x 3.20	65	68,9	68,2	20,0
FR.7993I.070	FREIO DE ARAME INTERIOR (7993) AÇO 070 x 3.20	70	74,0	73,2	25,0
FR.7993I.075	FREIO DE ARAME INTERIOR (7993) AÇO 075 x 3.20	75	79,0	78,2	25,0
FR.7993I.080	FREIO DE ARAME INTERIOR (7993) AÇO 080 x 3.20	80	84,0	83,2	25,0
FR.7993I.085	FREIO DE ARAME INTERIOR (7993) AÇO 085 x 3.20	85	89,0	88,2	25,0
FR.7993I.090	FREIO DE ARAME INTERIOR (7993) AÇO 090 x 3.20	90	94,0	93,2	25,0
	FREIO DE ARAME INTERIOR (7993) AÇO 095 x 3.20	95	99,0	98,2	25,0
FR.7993I.100	FREIO DE ARAME INTERIOR (7993) AÇO 100 x 3.20	100	104,2	103,2	32,0
	FREIO DE ARAME INTERIOR (7993) AÇO 105 x 3.20	105	109,2	108,2	32,0
FR.7993I.110	FREIO DE ARAME INTERIOR (7993) AÇO 110 x 3.20	110	114,2	113,2	32,0
	FREIO DE ARAME INTERIOR (7993) AÇO 115 x 3.20	115	119,2	118,2	32,0
	FREIO DE ARAME INTERIOR (7993) AÇO 120 x 3.20	120	124,2	123,2	32,0
	FREIO DE ARAME INTERIOR (7993) AÇO 125 x 3.20	125	129,2	128,2	32,0